

TrikeTransporter.com

Vancouver, BC Canada

MANUAL



Warranty Period

The guarantee period is two years from the date of purchase, applicable to the seller of vehicles unloaded from the container, under normal use and maintenance.

The guarantee period does not include these circumstances: improper maintenance, assembly, change, abuse, negligence, the use of non-seller of accessories and damaged accessories.

If you need maintenance of the vehicle during one year guarantee period, please contact your seller.

Guarantee period does not include following things:

- Rental
- We will not take the responsibility for dismantling or improper adjustment and maintenance, which

affects the safety and reliability of the vehicle.

TrikeTransporter.com

Vancouver, BC Canada

Content

INTRODUCTION.....	04
1. SAFETY – A BRIEF INTRODUCTION.....	05
2. IMPORTANT SAFETY INFORMATION.....	06
3. SAFETY SIGNS.....	07
4. DAILY CHECK.....	08
5. ASSEMBLY INSTRUCTION.....	10
6. MAINTENANCE.....	22
7. REGULAR CHECKS.....	24
8. SPECIFICATIONS.....	25

TrikeTransporter.com

Vancouver, BC Canada

FORE WORD:

Thank you for choosing TRIKE TRANSPORTER

We hope you like it. Please read the manual carefully before operating, as it contains safety and maintenance information. Failure to read this can lead to potential danger in the future.

Make sure to follow the progress of repairs and maintenance recommended on your trike; it is very important for the life and safety of your passengers and the trike.

We hope that using our product will bring you much enjoyment and profit. Thanks again for your choice.

1. SAFETY - A BRIEF INTRODUCTION

Make sure to drive the trike safely. We provide this operational handbook to help you make rational decisions. All the information will remind you to avoid being injured.

It is unrealistic and impossible to mention all the aspects of safe riding and maintenance, however this is a logical approach.

There are many forms of safety information, including:

- ★SAFETY SIGNS On the vehicle
- ★SAFETY WARNINGS Such as important safety precautions.
- ★INSTRUCTION - On the proper and safe use of the vehicle.

Please be sure to read this carefully, as this manual contains important safety information.

2. IMPORTANT SAFETY INFORMATION

You can do lots to protect your safety when the vehicle is operating. You can find many useful suggestions in the handbook, here are some important suggestions as follows:

It is forbidden for children under 16 years in the absence of adults to drive the vehicle.

Exceeding the capacity of the vehicle is the main factor causing accidents. Please make sure you are not under the influence of alcohol or drugs, fatigue or negligence, since they can impede your safe driving.

Make sure to keep your hands away from functioning components, or it will cause injury.

This section presents some most important information and suggestions to help you drive the

vehicle safety. Please read it carefully.

3. SAFETY SIGNS

Make sure you and the trike are both in the good condition before riding. In order to help you, we will discuss how to evaluate your driving state, which part you should check, and how to make your trike comfortable, convenient and safe.

When you drive the trike first time, please make sure the following information:

- ★Read the handbook carefully.
- ★Make sure you understand all the safety information.
- ★Learn how to control your trike – practice using the brakes and gears.
- ★If you are under 16 years old, you should be supervised by an adult.

Make sure check the following before riding:

- ★Make sure you are healthy enough.

TrikeTransporter.com

Vancouver, BC Canada

- ★ Dress appropriately for driving the trike.
- ★ Make sure you haven't used alcohol or drugs.
- ★ A little alcohol can cause danger and make you incapable of controlling the trike well.
- ★ Drugs can be dangerous when driving, even prescriptions from your doctor. Make sure you can drive the trike safely after you take medicine.
- ★ Please use the safety belt to make sure the passengers are safe.

4. Please check following parts before riding:

- Tires: Please check the air pressure.
- Nuts and bolts: Please check wheels and make sure all the nuts and bolts are tight and in the good order. Use a wrench if needed.
- The brake handles are on the right and left of the handlebar. When you use the brakes, the disc brakes (front and back) will cause the trike to stop.
- The turning handlebar: Make sure the turning handlebar works as normal.


TrikeTransporter.com

Vancouver, BC Canada

- Bell: Make sure the bell works well.
- Reflector: Make sure the reflectors are clean.
- Speed switch (gear switch): Get used to using the gears and make sure they work normally.

5.ASSEMBLING INSTRUCTION

●Frame and seat assemblage picture

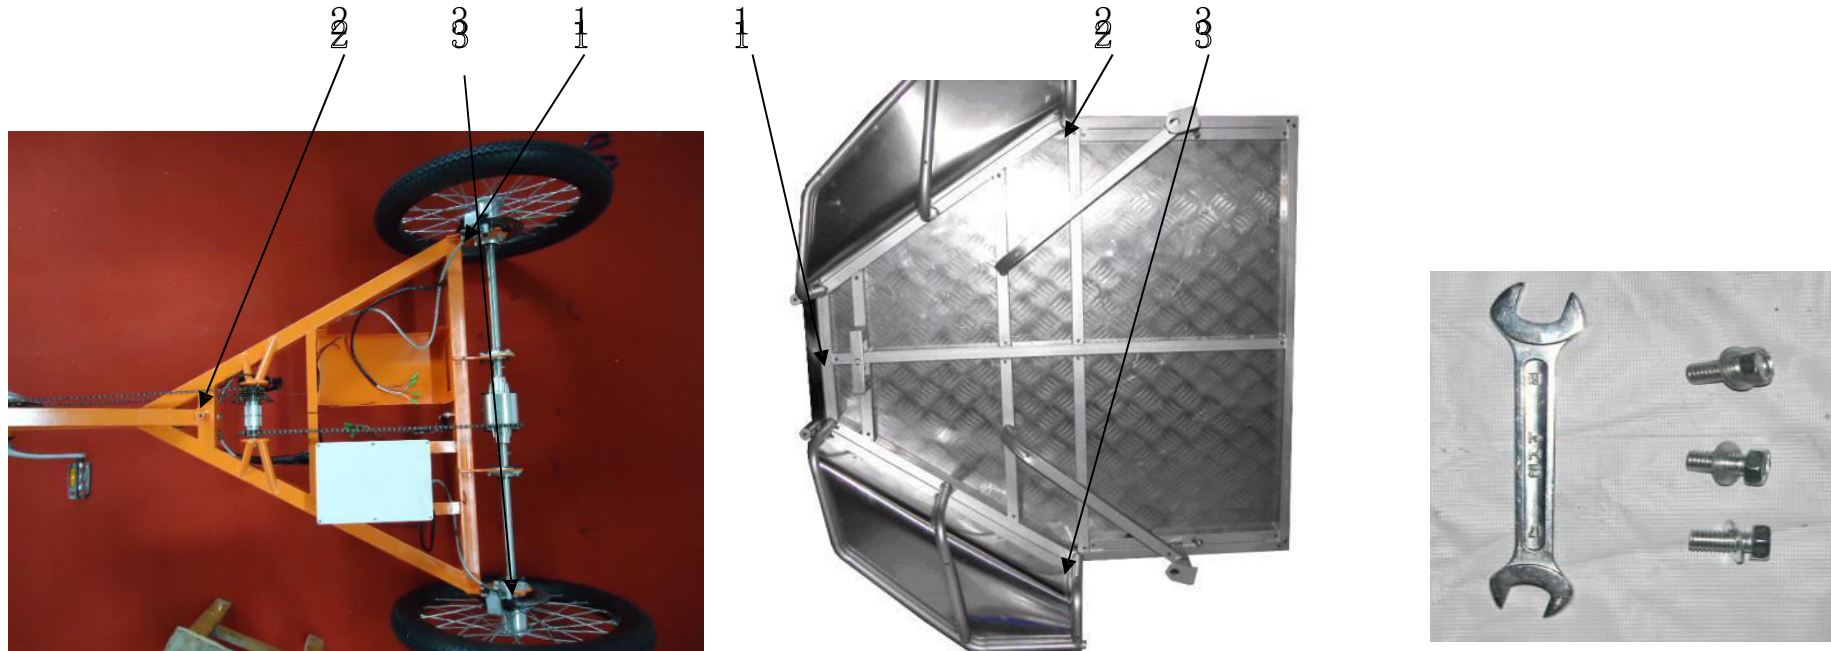

Thread glue painted to lock the nuts and bolts till achieving our torque standard.

● Canopy and passenger seat fixing picture

TrikeTransporter.com

Vancouver, BC Canada

Bracket fixing dot




Seat fixing dot

Rain cover fixing dot



Put the bending tube inside, wipe some thread glue, lock the bolts and nuts till they achieve the tensional standard.

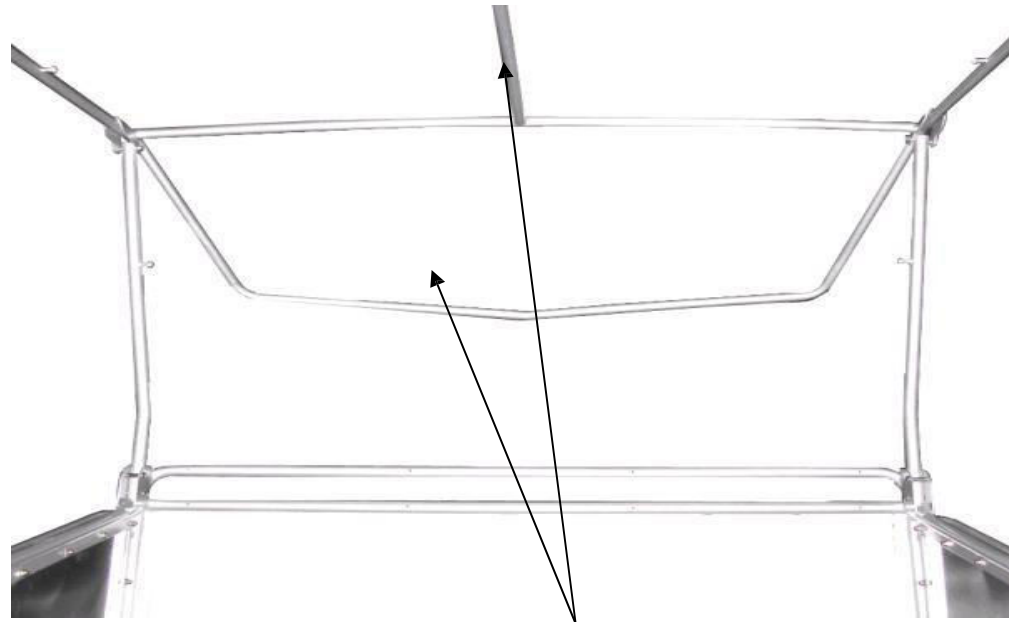

Place for fixing the gas spring

TrikeTransporter.com

Vancouver, BC Canada



TrikeTransporter.com

Vancouver, BC Canada



Finished canopy

Put the strut into the fixing position, fasten the bolt with thread glue till achieving the torque standard.

● **Fixing front wheel:**



Put the strut into position; fasten bolt and nuts with thread glue till achieving our tensional standard.

- Fixing the rear wheel:



TrikeTransporter.com

Vancouver, BC Canada



Place for the rear wheel

Place for the brake disc

Fixed plate

The hole position of the brake



Put the six screws which outstand inside of right wheel (has been installed brake disc) into the fixed plate, and then fix the brake into the hole.

●Note: While you are installing the brake, you can adjust the distance between the brake clamp and brake disc to ensure the performance of brake.

Rear wheels are finished now.

TrikeTransporter.com

Vancouver, BC Canada



Put the strut into the fixing position, fasten bolt and nuts with thread glue till achieving our tensional standard.

6. Maintenance

★Cleaning Note

Keep your trike clean. Clean the mud and oil around the adjusting controllers with wipes.

★Lubricating the trike

Lubricate your trike every 90 days, drop several drips lubricant on grease cup or specific spots.

★Chain Lubrication

Spray atomization lubricating oil on drive chain, lubricate chain.

★Chain Adjustment

Check the chain after the first 24 hours of using your Trike Transporter. If it's too loose, it needs readjustment.

- Loosen No.1 nut
- Screw No.2 nut half round deasil, then screw No.1 nut.
- Repeat above processes till the chain adjusts to the normal condition.

★Storage Note

If you haven't used your Trike Transporter in over 30 days or if you're putting it in storage, please do as follows:

- Please clean your trike, make the trike body is clean and dry, especially the rusty parts.
- Please check lubricant on axle, chain, brake and other parts to make sure there is enough lubricating oil.

Use lubricants after long periods of disuse.

- Please check that your wheels are working as normal, make sure the tires have enough air after long periods of disuse to avoid the inner tubes being damaged.

7. Regular Inspection and Maintenance

The following inspection periods depend on normal circumstance; it needs more frequent maintenance in dusty or wet areas.

Item	First week	Monthly	Quarterly	Yearly
Tire pressure and abrasion, braking capability, Loose bolts	I	I		
Drive chain	I	I	C, A, L	/
Frame	/	C, I	L	/

Key: A: adjustment, C: cleaning, I: inspection, cleaning, or necessary replacement, L: lubrication, R: replacement

8. Technical Specification

★Whole trike: Length: 2350mm, Width: 1150mm, Height: 1860mm

★Rear wheels distance: 1110mm

★Rear axles distance: 1900mm

★Distance from ground: Min. 130mm Max.400mm

★Tire spec: Front wheel: 20"- 2.125"

Rear wheel: motorcycle wheel size 2.75"- 19"

★Loading weight: 400kgs

TrikeTransporter.com

Vancouver, BC Canada

